# USB2.0 CMOS CAMERA ARTCAM-MI Series INSTRUCTION BOOKLET

ARTCAM-036MI2 Series
ARTCAM-130MI Series
ARTCAM-300MI Series
ARTCAM-500MI Series
ARTCAM-900MI Series
ARTCAM-1000MI Series



#### Contents

1. Attention ······ 3
2. Introduction 6
3. Main Features 6
4. The Product ······ 7
5. Connect the Camera 8
6. Specifications9
7. External Dimensions 13
8. External Trigger 16
9. Recommended PC····· 20

# 1. Attention

#### About this manual

- 1. Before using the camera, please read this manual thoroughly.
- 2. Please keep this manual reachable and always refer to the contents when needed.
- 3. Please contact us if the manual is lost or damaged. We will provide an replacement.
- 4. We cannot guarantee the safety of improper uses of the camera.
- 5. For your safety, please follow the directions of this manual.
- 6. All contents are subject to change.
- 7. Images in this manual may have been simplified to be easier comprehended.
- 8. Please contact us if you find any unclear points or mistakes in this manual.
- 9. Quoting, copying or altering some or all parts of the manual without our permission is prohibited.
- 10. We are not responsible for any lost or damages on your profits due to the use of our products.
- 11. Please understand that our oversea branches do not provide maintenance or repair services.

#### ■About the Icons

To keep the safety of the user, other people and their properties, please pay attention to the following icons.

# Marning

If the user fails to follow the instruction, physical injury on human or damages on hardware may occur.

# A Caution

If the user fails to follow the instruction, serious injury or death may occur.



•In following circumstances, please stop using the product and turn off the power immediately to prevent the risks of fires and electric shocks. If the product is defective, please contact us for repair or exchange. For your safety, please do not disassemble, modify or repair the camera on your own.

Please stop using the product and turn off the power immediately when:

- The product becomes smoky or gets extremely hot on the surface, or makes unusual smells or sounds.
- Foreign material or water gets into the product.
- The product falls and becomes damaged.

•Do not place the product on unstable surfaces. The product may be fallen and people may get hurt.



• Do not expose the product to steam or fumes to avoid electric shocks and fires.

•Do not leave the product in high temperature places such as inside of vehicles or under direct sunlight. High temperature may cause damages to the camera, or even cause fires.

•Do not cover the product with cloth or other materials. The product may get extremely hot and the heat may cause deformations on the parts or even cause fires.

•Please avoid dropping or shocking the product as the product may be damaged.

•Do not touch the cable with a wet hand. Such action may cause electric shocks.

•Please avoid continuously contacting the surface of the camera to your skin when the camera is being used. The surface temperature of the camera may cause burns.

■Other Notices

•Please do not use the camera under strong lights such as sun light for a long period. Also please do not expose the camera under strong lights even when the product is not being used because the sensor might be damaged.

#### Maintenance

• Wipe the dirt on surface with soft cloth or tissue paper. Do not use alcohol, thinner or benzene to avoid damaging the surface paints.

Electro Magnetic Interference

•The camera may interference with electronic devices such as TV and radio. Please do not place the camera next to such equipment.

#### ■Export Control

The Government of Japan controls military sensitive goods and technologies including relevant dual-use goods and technologies.

This product is a Catch-all Control item subject to the Foreign Exchange and Foreign Trade Act and its relevant legislations. Except for exporting to the 27 white countries designated in the Cabinet Order, export licenses are required if the products are going to be used for military use or if the end user of the product is related to all kinds of military activities. If your circumstances cause the need to apply export licenses, please notify us before you place orders. Also, please notify us in advance if the end users or purposes of use change after the purchase and thus cause the need to apply export licenses.

\*The 27 white countries not under the UNSC Arms Embargo:

Argentina, Australia, Austria, Belgium, Bulgaria, Canada, Czech Republic, Denmark, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Republic of Korea, Luxemburg, Netherlands, New Zealand, Norway, Poland, Portugal, Spain, Sweden, Switzerland, United Kingdom, and United States

About the Japanese Security Export Controls, please refer to the webpage for Security Export Control Policy, The Ministry of Economy, Trade and Industry:

http://www.meti.go.jp/policy/anpo/englishpage.html

#### ∎Guarantee

To save the environment, we do not issue warranty in printed format. Instead, all records of the warranty periods, delivery dates and the customer information are well kept in our system.

For more details, please refer to the sites below:

Hardware Warranty: http://www.artray.us/download/artray\_warranty.pdf

### 2. Introduction

ARTCAM-MI Series is CMOS cameras for industrial use.

This series adopt USB2.0 interface, so the data can be delivered to PC directly without a capture board. We provide a variety including cased cameras, board cameras which can be easily incorporated to other equipment, and so on.

#### 3. Main Features

High Resolution, High Frame Rate
We provide high speed CMOS cameras of a wide range of resolutions from 0.36 mega pixels to 10 mega pixels.

USB2.0 Interface

Our cameras adopt USB2.0 interface, so the data can be delivered to PC directly and no capture board is needed.

#### Small and Light

Our cameras are small and light, thus can be easily installed according to your desires. The board type camera with small type board lens is easy to be incorporated with other machines.

Varieties to Your Needs

We provide a variety including cased cameras, board type cameras, C-Mount board type cameras. For ARTCAM-036MI2 / 130MI / 500MI series, monochrome and near infrared types are also available upon your choice.

ROI (Region Of Interest)

One major benefit of CMOS sensor is the ROI function which enables readout of designated partial images with a faster transmission speed.

Sub-sampling function

This function results in a more pleasing output image with reduced subsampling artifacts and improves the frame rate.

• Global shutter (ARTCAM-036MI2 series) ARTCAM-036MI2 series adopts global shutter which is very suitable for machine vision.

External Trigger

ARTCAM-036MI2 / 130MI / 300MI / 500MI series are designed with external triggers.

Bounded Viewer Software

We provide the Viewer Software - ART-Viewer (Windows XP/Vista/7).

With this software, users can easily preview, save images and change camera settings.

Direct Show compatible

Except for being recognized as a standard USB device on the PC, some of the cameras may also be recognized as a DirectShow device.

(Please check if the model is DirectShow compatible with the sales representative before purchase)

· 2D Measurement & Filing Software(Optional)

Useful 2D measuring functions are available with the optional 2D Measuring & Filing Software - ART-MEASURE.

Recording Software(Optional)

The optional recording software - ART-REC allows the user to save movies in AVI format.

Software Development Kit(Optional)

For customer who prefers to create their own image processing software or use our camera with other applications, we provide SDK upon requests.

#### 4. The Product

1) Camera

2) USB Cable MI series: One end of the cable integrated to the camera, 1.8m approx. Board Type: Type A USB cable, 1.8m approx.

3) Instruction Booklet

4) Viewer software/Device Driver CD

<Options>


- 1) C Mount lens
- 2) 2 Measurement & Filing Software [ART-MEASURE]

3) Recording Software [ART-REC]

- 4) Software Development Kit [ARTCCM-SDK]
- 5) LabView DLL
- 6) 5m extension cable with USB2.0 repeater

## 5. Connect the Camera

#### 5-1 How to connect a camera



PC

#### 5-2 Shutter Speed

Shutter speed can be changed on the standard viewer software ART-Viewer.

The shutter speed is set directly on the sensor register, so please refer to the following formulas for the real exposure time.

Model	Method	
	Range : 1~32767(Exposure Time : 1/32967~1sec)	
036MI2 Series	Exposure Time=(Shutter Valuex(640+88))x0.0417 [µsec]	
	*640x480 pixels	at 24MHz
	Range : 1~16383(Exposure Time : 1/17991~1.033sec)	
130MI Series	Exposure Time= (Shutter Valuex(1280+234) - 180)x0.0417 [µsec]	
	*1280x1024 pixels	at 24MHz
	Range : 1~16383(Exposure Time : 1/9760~1.679sec)	
300MI Series	Exposure Time= (Shutter Valuex(2048+411))x0.0417 [µsec]	
	*2048x1536 pixels	at 24MHz
	Range : 1~16383(Exposure Time : 1/8702~2.173sec)	
500MI Series	Exposure Time= (Shutter Valuex(2592+592) - 426)x0.0417 [µsec]	
	*2592x1944 pixels	at 24MHz
	Range : 1~8191(Exposure Time : 1/3805~1.21sec)	
900MI Series	Exposure Time= (Shutter Valuex(3486+60)+2761)x0.0417 [µsec]	
	*3488x2616 pixels	at 24MHz
	Range : 1~8191(Exposure Time : 1/3507~1.348sec)	
1000MI Series	Exposure Time= (Shutter Valuex3952+2891)x0.0417 [µsec]	
	*3840x2748 pixels	at 24MHz

# 6. Specifications

#### 6-1 Color Model(1)

	ARTCAM-	ARTCAM-	ARTCAM-
	036MI2	130MI	300MI
	036MI2-OP	130MI-OP	300MI-OP
	036MI2-OP-CM	130MI-OP-CM	300MI-OP-CM
Sensor Type		CMOS Color Image Sensor	
Active Pixels	752(H)x480(V)	1280(H)x1024(∨)	2048H)x1536(V)
Active Imager	4.51(H)x2.88(V)mm	6.66(H)x5.32(V)mm	6.55(H)x4.92(V)mm
Size	1/3"	1/2"	1/2"
Scan Mode		Progressive Scan	
Pixel Size	6.0(H)x6.0(V)µm	5.2(H)x5.2(V)µm	3.2(H)x3.2(V)µm
Shutter Type	Global Shutter	Rolling	Shutter
Color Filter			
Array		RGB Bayer Pattern	
Frame Rate	60fps	15fps	6fps
Shutter Speed	1/32967~1s	1/17991~1s	1/9760~1.679s
Interface	USB2.0 Bulk transfer		
Synchronization	Internal Synchronization		
System		-	Γ
	C Mount	C Mount	C Mount
Lens Mount	(036MI2, 036MI2-OP-CM)	(130MI, 130MI-OP-CM)	(300MI, 300MI- OP-CM)
	Board Lens MountM12 P0.5(036Ml2-OP)	Board Lens MountM12 P0.5(130MI-OP)	Board Lens MountM12 P0.5
_			(300MI-OP)
Power		DC5V(Supplied by USB port)	
Power	Under Approx. 2W		
Consumption			
Ambient	Operating Temperature/Humidity : $0 \sim 35^{\circ}$ C/10 $\sim 80\%$ (Non condensing)		
Conditions	Storage Temperature/Humidity : 0~60°C /10~95%(Non condensing)		
	50(W)x47(H)x59.4(D)mm(036Ml2)	50(W)x47(H)x59.4(D)mm(130MI)	50(W)x47(H)x59.4(D)mm(300MI)
External	43.5(W)x43.5(H)x25.7(D)mm(036Ml2-OP)	43.5(W)x43.5(H)x25.7(D)mm(130MI-OP)	43.5(W)x43.5(H)x25.7(D)mm(300MI-OP)
Dimensions	50(W)x47(H)x27.1(D)mm(036MI2-OP-CM)	50(W)x47(H)x27.1(D)mm(130MI-OP-CM)	50(W)x47(H)x27.1(D)mm(300MI-OP-CM)
	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.
	Approx.100g(036MI2)	Approx.100g(130MI)	Approx.100g(300MI)
10/ojaht	Approx.20g(036MI2-OP)	Approx.20g(130MI-OP)	Approx.20g(300MI-OP)
Weight	Approx.60g(036MI2-OP-CM)	Approx.60g(130MI-OP-CM)	Approx.60g(300MI-OP-CM)
	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.

#### 6-2 Color Model (2)

	ARTCAM-	ARTCAM-	ARTCAM-
	500MI	900MI	1000MI
	500MI-OP	900MI-OP	1000MI-OP
	500MI-OP-CM	900MI-OP-CM	1000MI-OP-CM
Sensor Type		CMOS Color Image Sensor	
Active Pixels	2592(H)x1944(V)	3488(H)x2616(V)	3840(H)x2768(V)
Active Imager	5.70(H)x4.28(V)mm	6.10(H)x4.58(V)mm	6.41(H)x4.59(V)mm
Size	1/2.5"	1/2.3"	1/2.3"
Scan Mode		Progressive Scan	
Pixel Size	2.2(H)x2.2(V)µm	1.75(H)x1.75(V)µm	1.67(H)x1.67(V)µm
Shutter Type		Rolling Shutter	
Color Filter			
Array		RGB Bayer Pattern	
Frame Rate	3.75fps	3.2fps	2.2fps
Shutter Speed	1/8702~2.173s	1/3805~1.21s	1/3502~1.348s
Interface	USB2.0 Bulk transfer		
Synchronization			
System	Internal Synchronization		
	C Mount	C Mount	C Mount
Lens Mount	(500MI, 500MI-OP-CM)	(900MI, 900MI-OP-CM)	(1000MI, 1000MI-OP-CM)
	Board Lens MountM12 P0.5(500MI-OP)	Board Lens MountM12 P0.5(900MI-OP)	Board Lens MountM12 P0.5(1000MI-OP)
Power	DC5V(Supplied by USB port)		
Power		Linder Approx 200	
Consumption	Under Approx. 2W		
Ambient	Operating Temperature/Humidity: 0~35°C /10~80%(Non condensing)		
Conditions	Storage Temperature/Humidity: 0~60°C /10~95%(Non condensing)		
	50(W)x47(H)x59.4(D)mm(500MI)	50(W)x47(H)x59.4(D)mm(900MI)	50(W)x47(H)x59.4(D)mm(1000MI)
External	43.5(W)x43.5(H)x25.7(D)mm(500MI-OP)	43.5(W)x43.5(H)x25.7(D)mm(900MI-OP)	43.5(W)x43.5(H)x25.7(D)mm(1000MI-OP)
Dimensions	50(W)x47(H)x27.1(D)mm(500MI-OP-CM)	50(W)x47(H)x27.1(D)mm(900MI-OP-CM)	50(W)x47(H)x27.1(D)mm(1000MI-OP-CM)
	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.
	Approx.100g(500MI)	Approx.100g(900MI)	Approx.100g(1000MI)
Weight	Approx.20g(500MI-OP)	Approx.20g(900MI-OP)	Approx.20g(1000MI-OP)
vvergritt	Approx.60g(500MI-OP-CM)	Approx.60g(900MI-OP-CM)	Approx.60g(1000MI-OP-CM)
	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.

#### 6-2 Monochrome Model


	ARTCAM-	ARTCAM-	ARTCAM-	
	036MI2-BW	130MI-BW	500MI-BW	
	036MI2-BW-OP	130MI-BW-OP	500MI-BW-OP	
	036MI2-BW-OP-CM	130MI- BW-OP-CM	500MI-BW-OP-CM	
Sensor Type		CMOS Monochrome Image Sensor		
Active Pixels	752(H)x480(V)	1280(H)x1024(V)	2592(H)x1944(V)	
Active Imager	4.51(H)x2.88(V)mm	6.66(H)x5.32(V)mm	5.70(H)x4.28(V)mm	
Size	1/3"	1/2"	1/2.5"	
Scan Mode		Progressive Scan		
Pixel Size	6.0(H)x6.0(V) µm	5.2 (H)x5.2(V) μm	1.67(H)x1.67(V) µm	
Shutter Type	Global Shutter	Rolling S	Shutter	
Frame Rate	60fps	15fps	3.75fps	
Shutter Speed	1/32967~1s	1/17991~1s	1/8702~2.173s	
Interface		USB2.0 Bulk transfer		
Synchronization				
System		Internal Synchronization		
	C Mount	C Mount	C Mount	
Long Mount	(036MI2-BW, 036MI2-BW-OP-CM)	(130MI-BW, 130MI-BW-OP-CM)	(500MI-BW, 500MI-BW-OP-CM)	
Lens Mount	Board Lens MountM12 P0.5	Board Lens MountM12 P0.5	Board Lens MountM12 P0.5	
	(036MI2-BW-OP)	(130MI-BW-OP)	(500MI-BW-OP)	
Power		DC5V(Supplied by USB port)		
Power		Linder Approx 200/		
Consumption		Under Approx. 2W		
Ambient	Operating <sup>-</sup>	Temperature/Humidity : 0~35°C /10~80%(Nor	Operating Temperature/Humidity: 0~35°C /10~80%(Non condensing)	
<b>A B</b>	Storage Temperature/Humidity: 0~60°C /10~95%(Non condensing)			
Conditions	Storage T	emperature/Humidity : 0~60°C/10~95%(Non	condensing)	
Conditions	Storage T 50(W)x47(H)x59.4(D)mm	emperature/Humidity : 0~60°C /10~95%(Non 50(W)x47(H)x59.4(D)mm	condensing) 50(W)x47(H)x59.4(D)mm	
Conditions	6	, , ,	3,	
	50(W)x47(H)x59.4(D)mm	50(W)x47(H)x59.4(D)mm	50(W)x47(H)x59.4(D)mm	
External	50(W)x47(H)x59.4(D)mm (036Ml2-BW)	50(W)x47(H)x59.4(D)mm (130MI-BW)	50(W)x47(H)x59.4(D)mm (500MI-BW)	
	50(W)x47(H)x59.4(D)mm (036Ml2-BW) 43.5(W)x43.5(H)x25.7(D)mm	50(W)x47(H)x59.4(D)mm (130MI-BW) 43.5(W)x43.5(H)x25.7(D)mm	50(W)x47(H)x59.4(D)mm (500MI-BW) 43.5(W)x43.5(H)x25.7(D)mm	
External	50(W)x47(H)x59.4(D)mm (036Ml2-BW) 43.5(W)x43.5(H)x25.7(D)mm (036Ml2-BW-OP)	50(W)x47(H)x59.4(D)mm (130MI-BW) 43.5(W)x43.5(H)x25.7(D)mm (130MI-BW-OP)	50(W)x47(H)x59.4(D)mm (500MI-BW) 43.5(W)x43.5(H)x25.7(D)mm (500MI-BW-OP)	
External	50(W)x47(H)x59.4(D)mm (036Ml2-BW) 43.5(W)x43.5(H)x25.7(D)mm (036Ml2-BW-OP) 50(W)x47(H)x27.1(D)mm	50(W)x47(H)x59.4(D)mm (130MI-BW) 43.5(W)x43.5(H)x25.7(D)mm (130MI-BW-OP) 50(W)x47(H)x27.1(D)mm	50(W)x47(H)x59.4(D)mm (500MI-BW) 43.5(W)x43.5(H)x25.7(D)mm (500MI-BW-OP) 50(W)x47(H)x27.1(D)mm	
External	50(W)x47(H)x59.4(D)mm (036Ml2-BW) 43.5(W)x43.5(H)x25.7(D)mm (036Ml2-BW-OP) 50(W)x47(H)x27.1(D)mm (036Ml2-BW-OP-CM)	50(W)x47(H)x59.4(D)mm (130MI-BW) 43.5(W)x43.5(H)x25.7(D)mm (130MI-BW-OP) 50(W)x47(H)x27.1(D)mm (130MI-BW-OP-CM)	50(W)x47(H)x59.4(D)mm (500MI-BW) 43.5(W)x43.5(H)x25.7(D)mm (500MI-BW-OP) 50(W)x47(H)x27.1(D)mm (500MI-BW-OP-CM)	
External Dimensions	50(W)x47(H)x59.4(D)mm (036Ml2-BW) 43.5(W)x43.5(H)x25.7(D)mm (036Ml2-BW-OP) 50(W)x47(H)x27.1(D)mm (036Ml2-BW-OP-CM) *Lens, tripod, cable not included.	50(W)x47(H)x59.4(D)mm (130MI-BW) 43.5(W)x43.5(H)x25.7(D)mm (130MI-BW-OP) 50(W)x47(H)x27.1(D)mm (130MI-BW-OP-CM) *Lens, tripod, cable not included.	50(W)x47(H)x59.4(D)mm (500MI-BW) 43.5(W)x43.5(H)x25.7(D)mm (500MI-BW-OP) 50(W)x47(H)x27.1(D)mm (500MI-BW-OP-CM) *Lens, tripod, cable not included.	
External	50(W)x47(H)x59.4(D)mm (036Ml2-BW) 43.5(W)x43.5(H)x25.7(D)mm (036Ml2-BW-OP) 50(W)x47(H)x27.1(D)mm (036Ml2-BW-OP-CM) *Lens, tripod, cable not included. Approx.100g(036Ml2-BW)	50(W)x47(H)x59.4(D)mm (130MI-BW) 43.5(W)x43.5(H)x25.7(D)mm (130MI-BW-OP) 50(W)x47(H)x27.1(D)mm (130MI-BW-OP-CM) *Lens, tripod, cable not included. Approx.100g(130MI-BW)	50(W)x47(H)x59.4(D)mm (500MI-BW) 43.5(W)x43.5(H)x25.7(D)mm (500MI-BW-OP) 50(W)x47(H)x27.1(D)mm (500MI-BW-OP-CM) *Lens, tripod, cable not included. Approx.100g(500MI-BW)	


#### 6-3 NIR Model


	ARTCAM-	ARTCAM-	ARTCAM-
	036MI2-NIR	130MI-NIR	500MI-NIR
	036MI2-NIR-OP	130MI-NIR-OP	500MI-NIR-OP
	036MI2-NIR-OP-CM	130MI- NIR-OP-CM	500MI-NIR-OP-CM
Sensor Type		CMOS Monochrome Image Sensor	
Active Pixels	752(H)x480(V)	1280 (H)x1024(∨)	2592(H)x1944(V)
Active Imager	4.51(H)x2.88(V)mm	6.66(H)x5.32(V)mm	5.70(H)x4.28(V)mm
Size	1/3"	1/2"	1/2.5"
Scan Mode		Progressive Scan	
Pixel Size	6.0(H)x6.0(V)µm	5.2 (H)x5.2(V)µm	1.67(H)x1.67(V)µm
Shutter Type	Global Shutter	Rolling S	Shutter
Frame Rate	60fps	15fps	3.75fps
Shutter Speed	1/32967~1s	1/17991~1s	1/8702~2.173s
Interface		USB2.0 Bulk transfer	
Synchronization			
System		Internal Synchronization	
	C Mount	C Mount	C Mount
Laura Marinat	(036MI2-NIR, 036MI2-NIR-OP-CM)	(130MI-NIR, 130MI-NIR-OP-CM)	(500MI-NIR, 500MI-NIR-OP-CM)
Lens Mount	Board Lens MountM12 P0.5	Board Lens MountM12 P0.5	Board Lens MountM12 P0.5
	(036MI2-NIR-OP)	(130MI-NIR- OP)	(500MI-NIR- OP)
Power		DC5V(Supplied by USB port)	
Power			
Consumption		Under Approx. 2W	
Ambient	Operating Temperature/Humidity: 0~35°C /10~80%(Non condensing)		
Conditions	Storage Temperature/Humidity: 0~60°C/10~95%(Non condensing)		
	50(W)x47(H)x59.4(D)mm	50(W)x47(H)x59.4(D)mm	50(W)x47(H)x59.4(D)mm
	(036MI2-NIR)	(130MI-NIR)	(500MI-NIR)
	43.5(W)x43.5(H)x25.7(D)mm	43.5(W)x43.5(H)x25.7(D)mm	43.5(W)x43.5(H)x25.7(D)mm
External	(036MI2-NIR-OP)	(130MI-NIR-OP)	(500MI-NIR-OP)
Dimensions	50(W)x47(H)x27.1(D)mm	50(W)x47(H)x27.1(D)mm	50(W)x47(H)x27.1(D)mm
	(036MI2-NIR-OP-CM)	(130MI-NIR-OP-CM)	(500MI-NIR-OP-CM)
	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.
	Approx.100g(036MI2-NIR)	Approx.100g(130MI-NIR)	Approx.100g(500MI-NIR)
	Approx.20g(036MI2-NIR-OP)	Approx.20g(130MI-NIR-OP)	Approx.20g(500MI-NIR-OP)
Weight	Approx.60g(036MI2-NIR-OP-CM)	Approx.60g(130MI-NIR-OP-CM)	Approx.60g(500MI-NIR-OP-CM)
	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.	*Lens, tripod, cable not included.
		,,, _,	

#### 7. External Dimensions

7-1 C-MOUNT, CASED, USB CABLE TYPE ARTCAM-036MI2/036MI2-BW/036MI2-NIR ARTCAM-130MI/130MI-BW/130MI-NIR ARTCAM-300MI ARTCAM-500MI/500MI-BW/500MI-NIR ARTCAM-900MI ARTCAM-1000MI

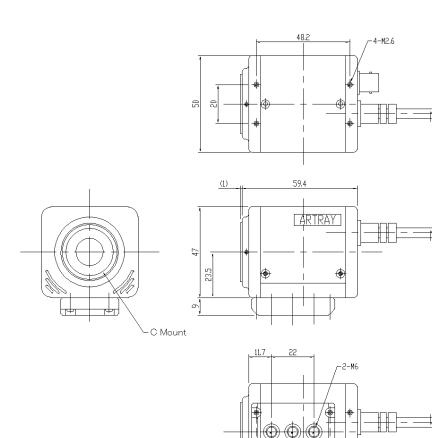


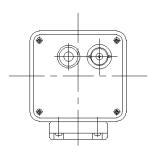




¢


7-2 BOARD LENS, BOARD TYPE ARTCAM-036MI2-OP/036MI2-BW-OP/036MI2-NIR-OP ARTCAM-130MI-OP/130MI-BW-OP/130MI-NIR-OP ARTCAM-300MI-OP ARTCAM-500MI-OP/500MI-BW-OP/500MI-NIR-OP ARTCAM-900MI-OP ARTCAM-1000MI-OP

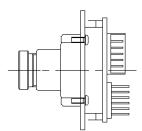


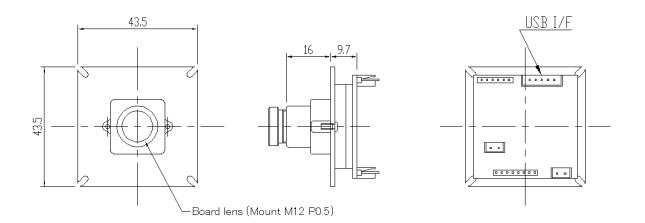



#### 7-3 C-MOUNT, BOARD TYPE

ARTCAM-036MI2-OP-CM/036MI2-BW-OP-CM/036MI2-NIR-OP-CM ARTCAM-130MI-OP-CM/130MI-BW-OP-CM/130MI-NIR-OP-CM ARTCAM-300MI-OP-CM ARTCAM-500MI-OP-CM/500MI-BW-OP-CM/500MI-NIR-OP-CM ARTCAM-900MI-OP-CM ARTCAM-1000MI-OP-CM

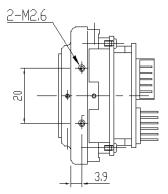

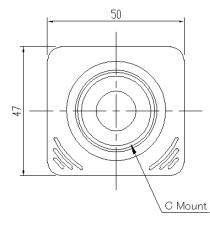

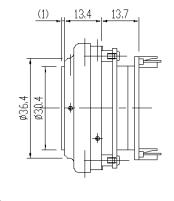


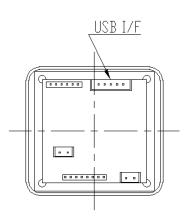

# 8. External Trigger


#### 8-1. Trigger Input

ARTCAM-036MI2 / 130MI / 300MI / 500MI series are designed with external trigger.

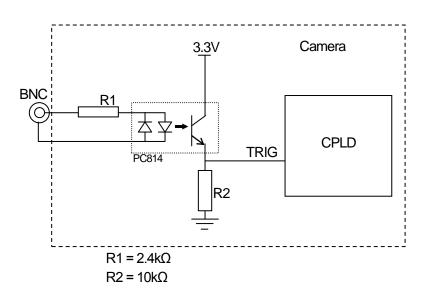

**Trigger Input Circuit** 


#### 8-2-1 Trigger timing chart (ARTCAM-036MI2 series)

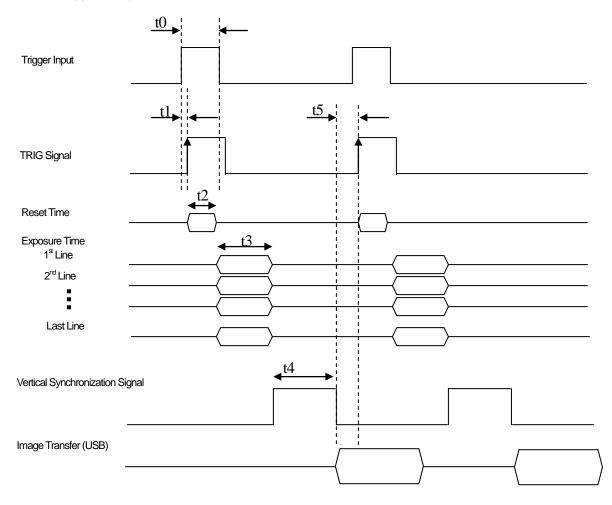

tO	Input Pulse Width	Above 1ms	
t1	Photo Coupler Delay	1~99µs (Subject to Input Pulse Voltage)	
ť2	Reset Time	6*1H	
t3	Exposure Time	Subject to Shutter Speed Settings	
t4	Frame Transfer	Subject to ROI Settings and Operation Clock	
t5	Effective Trigger for next frame	Approximate 100H after the Vertical Synchronization Signal transits to a low voltage	

\*For ARTCAM-036MI2, the image will be acquired when the trigger signal transits from a low voltage to a high one. If the trigger signal stays at a high level, the trigger time cycle will repeat automatically and image will be acquired continuously.


#### 8-2-2 Trigger timing chart (ARTCAM-130MI/300MI series)

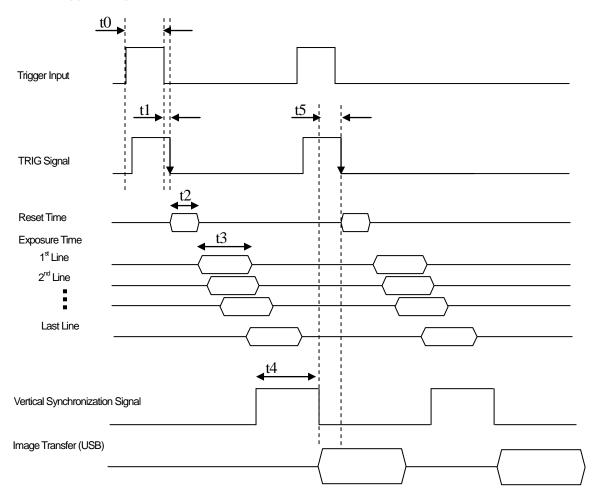

tO	Input Pulse Width	Above 1ms	
t1	Photo Coupler Delay	1~99µs (Subject to Input Pulse Voltage)	
ť2	Reset Time	9 * 1H(ARTCAM-130MI series) 18 * 1H(ARTCAM-300MI series)	
t3	Exposure Time	Subject to Shutter Speed Settings	
t4	Frame Transfer	Subject to ROI Settings and Operation Clock	
t5	Effective Trigger for next frame	Approximate 100H after the Vertical Synchronization Signal transits to a low voltage	

\*For ARTCAM-130MI/300MI, the image will be acquired only when the trigger signal transits from a high voltage to a low one. If the trigger signal stays at a high level or at a low level, no image will be acquired.

#### 8-2-3 Trigger timing chart (ARTCAM-500MI series)

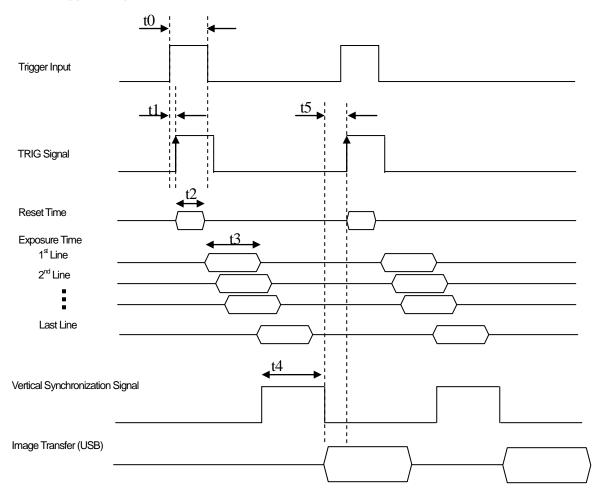

tO	Input Pulse Width	Above 1ms	
t1	Photo Coupler Delay	1~99µs (Subject to Input Pulse Voltage)	
ť2	Reset Time	8*1H	
t3	Exposure Time	Subject to Shutter Speed Settings	
t4	Frame Transfer	Subject to ROI Settings and Operation Clock	
t5	Effective Trigger for next frame	Approximate 100H after the Vertical Synchronization Signal transits to a low voltage	

\*For ARTCAM-500MI, the image will be acquired when the trigger signal transits from a low voltage to a high one. If the trigger signal stays at a high level, the trigger time cycle will repeat automatically and image will be acquired continuously.

### 9. Recommended PC

- Intel chip set, Southbridge above ICH5
  - OS : Windows XP / Vista / 7

	ARTCAM-036MI2/130MI/300MI	ARTCAM-500MI/900MI/1000MI
CPU	Pentium4 Above 1.7GHz	Pentium4 Above 2.4GHz
Memory Above 512MB		Above 768MB

\*The camera may not work properly with some PCs(If USB host chips are other than AMD and Intel)

# Caution

Please refer the restrictions below when you use ARTCAM.

(1)USB host chip

Please use Intel authorized USB2 host controller.

Make sure that you find "Intel(R) 82801DB/DBM USB2 ENHANCED HOST CONTROLLER" on USB Controller window. The direction is as below:

"Control Panel" -> "Hardware" -> "Device Manager" -> "USB Controller"

NOTE: We do not guarantee the proper operation of this camera on external USB host cards.

Based on the design, the external USB host card may have a slow transfer rate as being connected to a host via PCI bus.

(2)Hyper Thread Bios

Please disable this function in case your PC has a built-in Intel hyper thread.

#### (3)Use of other USB2.0 hardware

The data on our camera/converter is transferred in bulk mode. For this reason, when using our camera/converter, please avoid using other bulk transferred USB2.0 hardware such as Memory stick, External HDD, External DVD, CDROM and etc.

Especially if the PC adopts a Cypress control chip, it may not recognize the later connected bulk transfer device if the device is connected when the Artray camera is in function. This issue is hard to be solved because the problem is on the lower firmware of the control chip and the PC bios.

As a solution, we recommend to install a PCI USB host card to the PC and connect external USB hardware to this port only.

#### (4)USB2.0 cable Extension

We cannot guarantee the proper operation of the extension cable even it is compatible with USB2.0 unless the extension cable is confirmed by us. This is because the USB transfer frequency of this camera is 192MHz.

What may cause the problem is that the regulation of the power lines becomes not enough, and so causes impudence mismatch on data signals.

\*For the recommended extension cable, please contact our sales department. (TEL: +81-3-3389-5488)

Users may encounter problems such as "Camera error", "Disappearance of Device driver", " Operation error in high-speed mode", "Unknown USB device" and etc. if an unconfirmed extension cable is used.



### ARTRAY CO., LTD.

1-17-5 Kouenjikita, Suginami-ku, Tokyo 166-0002 Japan Tel : +81-3-3389-5488 Fax : +81-3-3389-5486 Email : sales@artray.us URL : www.artray. us